


# **WSME MOTOR INSTRUCTIONS p1**

ALPHA SUPPORT PHONE (909) 307-2320

# **1. TECHNICAL SPECIFICATIONS**

Power: AC 120V/60Hz Protection Index: IP44 The motor can be compatible with 15 remotes at most.

# WIRE CONNECTION

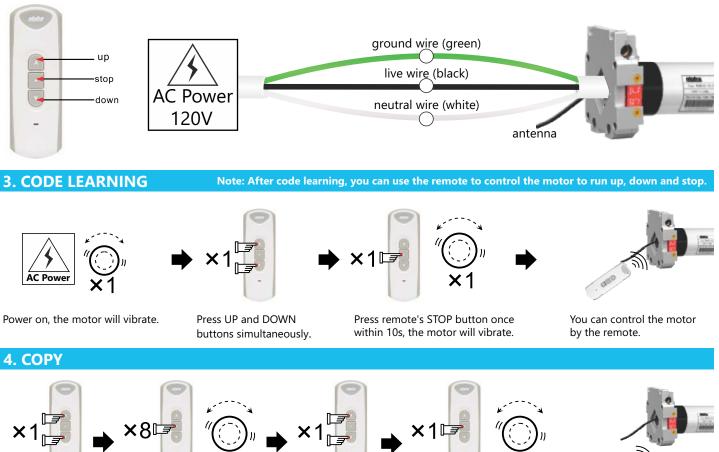

Press A remote

buttons simultaneously.

UP and DOWN

Δ

Press A remote STOP

the motor will vibrate.

button 8 times within 10s,

Press B remote STOP button once within 10s, the motor will vibrate.

В



You can control the motor by B remote.

### **5. CODE DELETING**





‴⊑⊐ ×7

 




The remote you are operating now won't control the motor again.




All the remote that have already learned the motor's code won't control the motor anymore.




**B.** Delete all the remotes





 

 


В

Press B remote UP

simultaneously.

 and DOWN buttons







Press UP and DOWN buttons simultaneously Press remote STOP button 6 times within 10s.

Press remote UP button once within 10s, the motor will vibrate.



# WSME MOTOR INSTRUCTIONS p2

#### ALPHA SUPPORT PHONE (909) 307-2320

## **6. DIRECTION CHANGE**





€IX1



×1□



Press UP and DOWN buttons simultaneously.

Press remote's STOP button 6 times within 10s.

Press remote DOWN button once within 10s, the motor will vibrate.

The motor's running direction is changed.

## **7. SET STEP BY STEP FUNCTION**

If the motor is in vibration state, long press emitter's UP or DOWN button for 3 seconds, the motor will run continously.





 
Press UP and DOWN buttons simultaneously.

# Press remote's STOP button once within 10s.




Press remote UP button once

within 10s, the motor will vibrate.



The motor will run step by step.

# 8. DELETE STEP BY STEP FUNCTION

 

Press UP and DOWN buttons simultaneously.



 
Press remote's STOP button

once within 10s.

च∎x1



Press remote DOWN button once within 10s, the motor will vibrate.



The motor will run continuously.



Setting may fail due to the interference of signal. If in this case, please reset.

The remote RE101 is taken as an example in this instruction. The receiver is compatible with several other rolling code remotes.

Please do not press buttons for too long in case life span of battery declines. Pressing time should be at 0.5s, interval time should be 1 second. If the battery is in low power, please replace battery.

The control unit is of high voltage. Please do not place it in humid atmosphere.

Children should be supervised to ensure that they do not play with the appliance.

Ambient temperature: -10°C to +55°C

All products are as per material subjects if there is change in appearance, color, function etc.

The information is subject to changes without prior notice.



sales@alphamotors.us www.alphamotors.us T (909) 307-2320