 



# Alpha RE701V-RE703V REMOTE INSTRUCTIONS

ALPHA SUPPORT PHONE (909) 307-2320


## 1. APPEARANCE

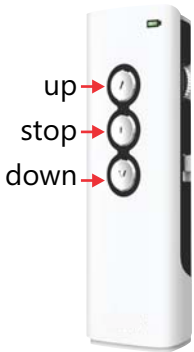

 
**RE701V**  
(single channel)

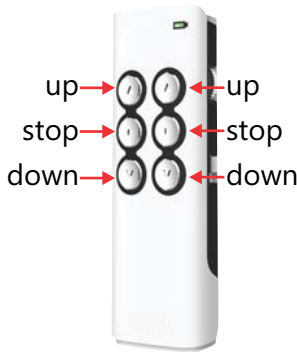

**RE702V**  
(two channel)

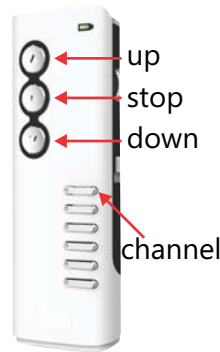 

**RE703V**  
(six channel)

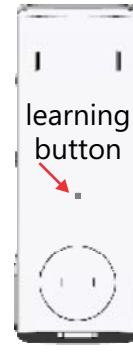 

**BACK**

## 2. TECHNICAL SPECS

**POWER**  
3V Battery Model: CR2032

**WORKING TEMP**  
-20°C - +60°C

**CURRENT** <16mA

 
**CODE** Rolling

**TRANSMISSION FREQUENCY** 433.92MHz

## 3. CODE LEARNING

Choose one channel, then press UP and DOWN buttons simultaneously once.

Then short press the STOP button, now the code learning of the selected channel is successful.

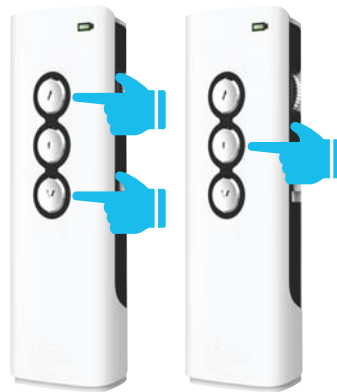

## 4. GROUP CONTROL

A. Quick press (1sec) the channels that you want to control one by one to choose channels.

B. Press UP, STOP, DOWN to control the channels that you have chosen.

C. If you only want to control one channel, long press that channel button.

NOTE: Light on indicates that you have to chosen the channels successfully. Please press the channels quickly, otherwise it will go to sleep mode (light off)



## 5. POWER DISPLAY

When the battery level is too low, the power indicator light on the upper right corner will turn red. In this case, the battery needs to be replaced.



## 6. ANGLE ADJUSTMENT

To adjust the angle, scroll the wheel (on the right side) up or down.



## 7. SPEED ADJUSTMENT

Dial the switch on the right side, so you can complete the 3 gear speed adjustment.



## ATTENTION

- The RE701-RE703V series remotes are for vertical blinds.
- With group control settings, the channel should be increased or decreased within the checking channel time (3-4 seconds). Long press to toggle to a single channel in the sleep state, and view the channel status that can be operated.
- To improve battery life, the remote button press time should not be too long, the normal interval press time should be 1-2 seconds. Remote does not work when the battery power is low. In this case, the battery needs to be replaced.